





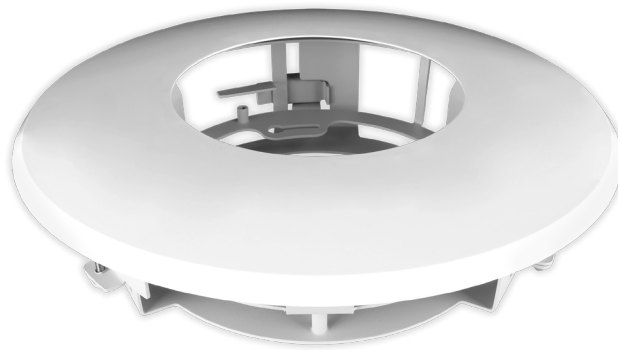

Flush mount for multi-sensor vari-focal cameras

DWC-PV20FMW



WHAT'S IN THE BOX

Camera Mounting Screws		2	Quick Setup Guide		1
Safety Wire		2	Mounting Template		1
Eye Bolt		2			


NOTE: Download all your support materials and tools in one place

1. Go to: <http://www.digital-watchdog.com/resources>
2. Search your product by entering the part number in the **'Search by Product'** search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click **'Search'**. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.



INSTALLATION


- 1 Before the installation, remove the magnetic cover from the flush mount.
- 2 Using the mounting template mark and drill the necessary holes in the mounting surface.
- 3 Place the eye bolt in the center of the flush mount base. Connect the first safety wire between the eye bolt and the mounting surface.

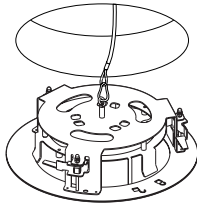

- 4 Adjust the 3-point in-ceiling wing using a screwdriver. Twist the screws to tighten and expand until the flush mount is secured to the mounting surface.
- 5 Affix the safety wire at the bottom of the flush mount's base. Connect the other side of the safety wire to the base of the camera.
- 6 To mount the camera to the mounting accessory, remove the dome from the camera base using the wrench included with the camera.

NOTE: Do not touch the lenses when handling the camera modules.

- 7 Pass wires through the flush mount base and make all necessary connections.
- 8 Secure the camera to the flush mount. Align the 'T' lines on the side of the camera with the lock and unlock icons on the flush mount as seen in the image below. Rotate the camera clockwise to lock it into position. Use the two included screws to secure the camera to the flush mount.

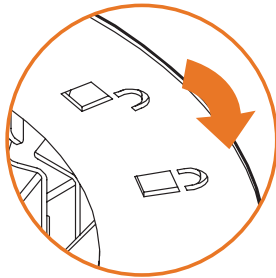

- 9 Adjust the camera modules' position and angle and place the dome cover on the camera. Secure the dome cover to the camera base using the screws included with the camera. See the camera's QSG for more information. Complete the installation by reattaching the magnetic cover over the camera dome.

